

Silencers

BESLC



THREAD (R, PT, BSPT)	THREAD (NPT)	THREAD (G, BSPP)
BESLC-M5	BESLC-U10	BESLC-G01
BESLC-01	BESLC-N01	BESLC-G02
BESLC-02	BESLC-N02	BESLC-G03
BESLC-03	BESLC-N03	BESLC-G04
BESLC-04	BESLC-N04	BESLC-G06
BESLC-06	BESLC-N06	BESLC-G08
BESLC-08	BESLC-N08	BESLC-G10
BESLC-10	BESLC-N10	BESLC-G12
BESLC-12	BESLC-N12	BESLC-G16
BESLC-16	BESLC-N16	

BESLD



THREAD (R, PT, BSPT)	THREAD (NPT)	THREAD (G, BSPP)
BESLD-M5	BESLD-U10	BESLD-G01
BESLD-01	BESLD-N01	BESLD-G02
BESLD-02	BESLD-N02	BESLD-G03
BESLD-03	BESLD-N03	BESLD-G04
BESLD-04	BESLD-N04	BESLD-G06
BESLD-06	BESLD-N06	BESLD-G08
BESLD-08	BESLD-N08	BESLD-G10
BESLD-10	BESLD-N10	BESLD-G12
BESLD-12	BESLD-N12	BESLD-G16
BESLD-16	BESLD-N16	

Silencers

PSL



THREAD (R, PT, BSPT)	THREAD (NPT)	THREAD (G, BSPP)
PSL-M5	PSL-U10	PSL-G01
PSL-01	PSL-N01	PSL-G02
PSL-02	PSL-N02	PSL-G03
PSL-03	PSL-N03	PSL-G04
PSL-04	PSL-N04	PSL-G06
PSL-06	PSL-N06	PSL-G08
PSL-08	PSL-N08	PSL-G10
PSL-10	PSL-N10	PSL-G12
PSL-12	PSL-N12	PSL-G16
PSL-16	PSL-N16	

PSU



THREAD (R, PT, BSPT)	THREAD (NPT)	THREAD (G, BSPP)
PSU-M5	PSU-U10	PSU-G01
PSU-01	PSU-N01	PSU-G02
PSU-02	PSU-N02	PSU-G03
PSU-03	PSU-N03	PSU-G04
PSU-04	PSU-N04	PSU-G06
PSU-06	PSU-N06	PSU-G08
PSU-08	PSU-N08	PSU-G10
PSU-10	PSU-N10	PSU-G12
PSU-12	PSU-N12	PSU-G16
PSU-16	PSU-N16	